




It saves water up to
60% against common shower head.

1. Name of Parts

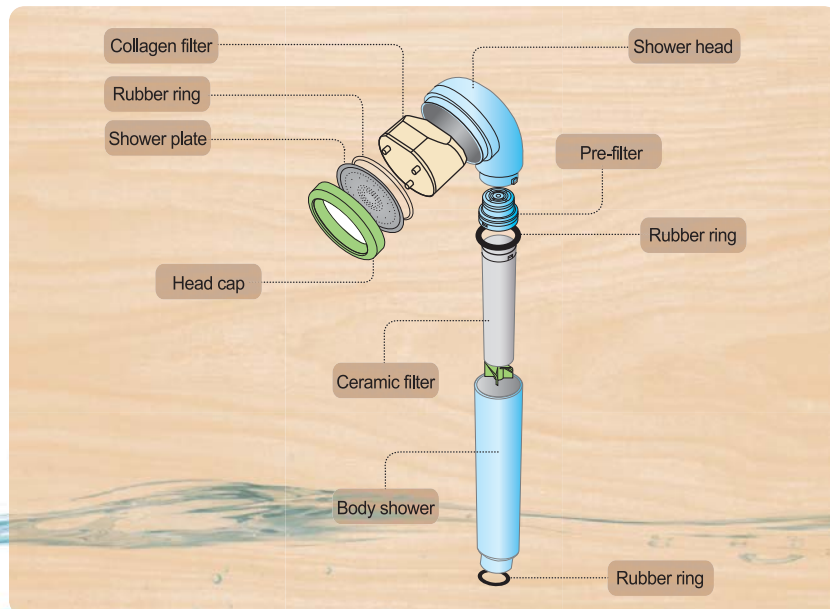

2. How to install



Remove old shower head from shower hose



Connect BLUWASH Collagen shower head to shower hose



Check leakage by turning water on

- ※ Be careful not to lose rubber ring when you install the product.
- ※ When the rubber ring is not equipped, it causes water leakage.

3. How to change Pre-filter



Turn the connection part of shower in the direction of arrow and remove pre-filter from the inside of the shower head.



Insert the pre-filter into the bottom of the shower head




Turn the connection part of shower in the direction of arrow.

- ※ Be careful not to lose the rubber ring when you disassemble the product to change the filter.
- ※ If the rubber ring is not installed, it causes water leakage.
- ※ The life span of filter depends on amount of water used, water pressure and quality of water.
- ※ When water pressure is remarkably reduced, check the pre-filter.
- ※ When color of the pre-filter changes to yellow or brown, replace the pre-filter.

4. How to change Collagen filter



Turn the head cap in the direction of arrow and remove old collagen filter.

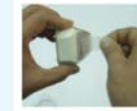

Remove the protective tape on new collagen filter.



Insert new collagen filter as per the direction of the picture



Turn the head cap in the direction of arrow.

5. Cautions

1. The discharged water from the shower head is not eatable.
2. To guarantee the proper function of shower head, replace the filter periodically as required.
3. Be sure to use the shower head under the temperature of 70°C. It may damage the shower head and filters.
4. Be careful not to lose the rubber ring when you disassemble the product to replace filter.

6. Specifications

Body of shower head	PC material
Water pressure/Temperature	0.7-7.5kgf/cm ² , 1-65°C
Shower plate structure	Micro pore discharge
Total number of shower plate holes	Ø0.20 / 412ea
Cartridge structure	Revolving cartridge structure
Pre-filter replacement	About 3-4months, Ø26x19mm
Ceramic filter replacement	Semi-permanent use
Collagen filter replacement	About 2months

7. Warranty

1. Warranty period is one (1) year after purchase
2. The product has passed out strict quality control and inspection procedure.
3. Any defect in the products found during normal operation of the product will be returned, replaced free of charge under warranty period.
4. Return/Replacement in the cases below is provided at charges of customers even under warranty.
 - The warranty period is over
 - Damage caused by customer's lack of caution
 - Inappropriate repair or restructuring
 - Violation of instruction herein
 - Consumable filter replacement